



## Product Specification and Technical Data

**PRODUCT: BG Throttle Body & Intake Cleaner**

**PART NO.: 406**

| <b>TEST DATA:</b> | <b>Test</b>                             | <b>ASTM Test Method</b> | <b>Typical Test Results</b> |
|-------------------|---|-------------------------|-----------------------------|
|                   | Specific Gravity (H <sub>2</sub> O = 1) | D 1298                  | 0.86                        |
|                   | Flash Point, TCC                        | D 56                    | -20°C (-4°F)                |
|                   | Appearance and Odor                     |                         | Light Amber/Solvent         |
|                   | Net Weight, oz. (mL)                    |                         | 14.75 (600)                 |
|                   | Volume, fl. oz. (mL)                    |                         | 19.9 (588)                  |

**PROBLEM:** Modern engines are finely tuned and extremely sensitive to deposits which accumulate in the air induction system. Varnish, dirt and road grime will interrupt the air flow disrupting the critical fuel/air ratio. This may result in problems such as rough idle, poor fuel economy and increased exhaust emissions.

**SOLUTION:** BG Throttle Body & Intake Cleaner is a blend of cleaning agents which safely and rapidly removes accumulated deposits from the butterfly/throttle valve, throttle body and idle air control valves of the air induction system. It also combines lubricants and anticorrosion ingredients which protect these critical components. Safe for oxygen sensors and catalytic converters. Use every 3,000 miles (4,800 km).

- BENEFITS:**
- Reduces harmful exhaust emissions
  - Restores engine performance
  - Increases fuel economy

**USAGE:** Run engine to normal operating temperature. With air intake boot removed, gently spray BG Throttle Body & Intake Cleaner into throat of intake. Short bursts of spray and increasing the idle may be necessary to keep engine running. Spray cleaner around the entire throttle plate and into the idle air control valve passage for complete cleaning of the throttle body. Allow engine to idle for 15 minutes after cleaner is consumed. Replace air intake boot and drive immediately.

BG Products, Inc. accepts no liability for excessive use or misuse of this product.